

How to use 4-point Pin Probe

1. Please, pay close attention during a measurement with 4-point Pin Probe

This Pin may be broken or damaged by the misuse or over-pressed force when measuring



Wrong



Right

※ The measured resistance onto a cell might be error by a corrosion beside a bolt.

2. How to replace the Pins

■ Name of PIN Probe Parts



Guide Holder



Pin Holder



Probe Pin

① How to replace a Pin from Pin Holder.

Separate the damaged or troubled Pins by the tool of long-nose nipper.



② How to insert a new Pin.

Primarily separate the deteriorated or damaged Pins, and finish to insert the new ones to PIN pipes

